



ALWAYS unplug the unit BEFORE replacing the hand sanitizer dispenser.

**Open Flame:** Do not use this equipment or store the sanitizer supply container next to an open flame. The sanitizer poses an explosion risk due to explosive vapors.

## Removal of Current Battery Holder

1. Squeeze tabs on battery and remove battery from the battery holder.
2. Disconnect the dispenser plug and battery power supply plug (see Figure 1).
3. **Outpost Stands Only** - Carefully lift the supply container from the container holder.
4. Remove 4 screws securing the battery pack holder to the container base or dispenser housing (see Fig 2).
5. Lift the battery holder from the container base or dispenser housing.



Figure 1

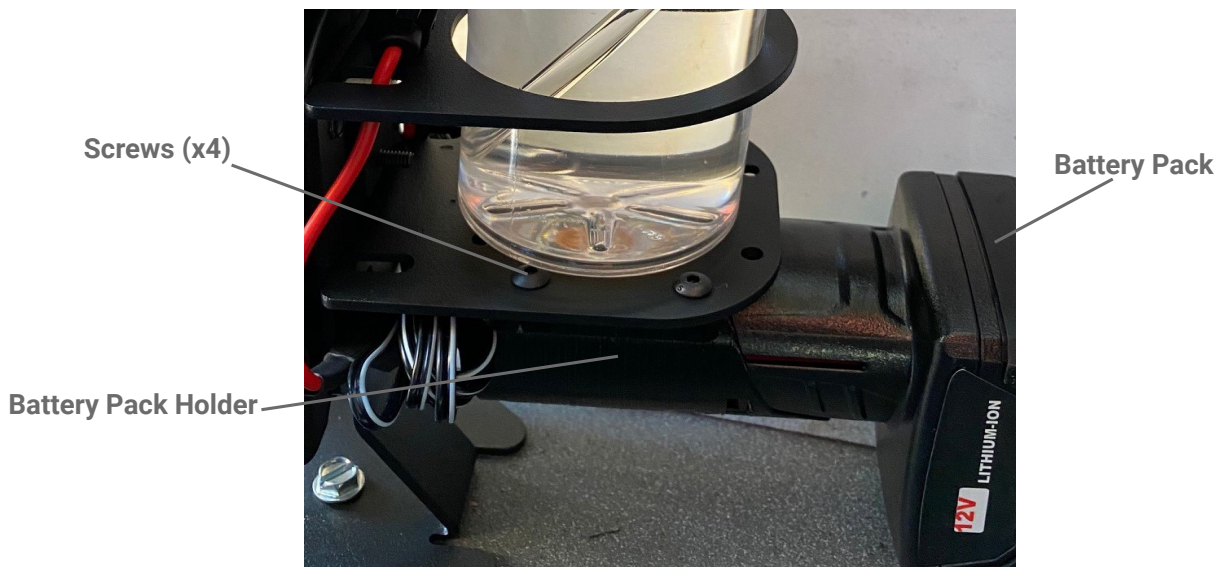


Fig. 2

## Install New Battery Holder

1. Install the replacement battery pack holder and secure with 4 screws removed in step 4.
2. **Outpost Stands Only** - Reinstall the supply container within the container holder.
3. Reconnect the dispenser plug and battery power supply plugs. Align the white index mark on the battery power supply plug with the white wire on the dispenser plug. Refer to Figure 3 for view of plugs.
4. Install battery into the battery holder.



Figure 3

**Battery Power Supply Plug - Align white mark with white wire on dispenser plug**